 
 
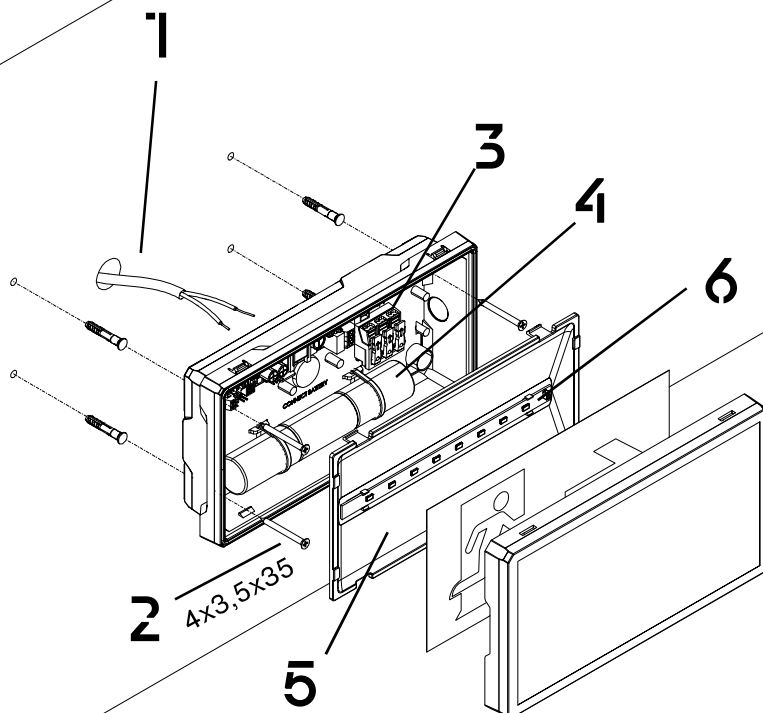 
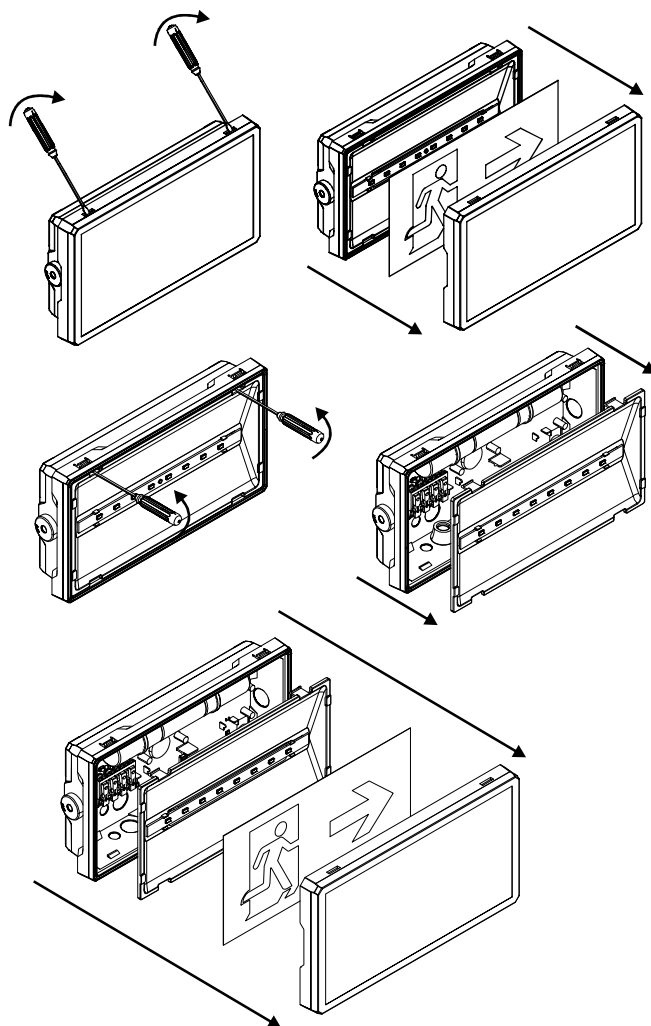 
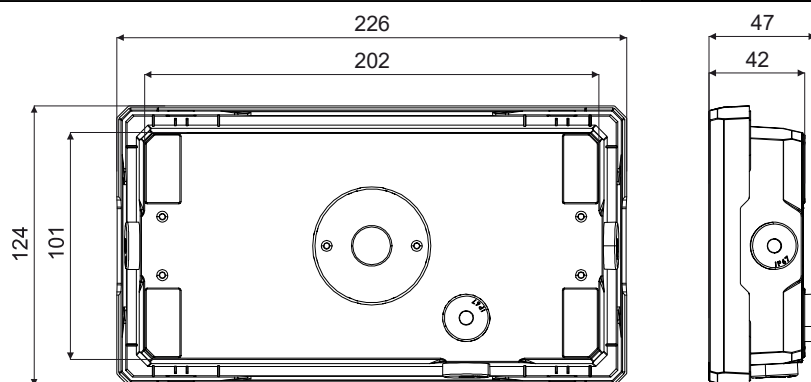 
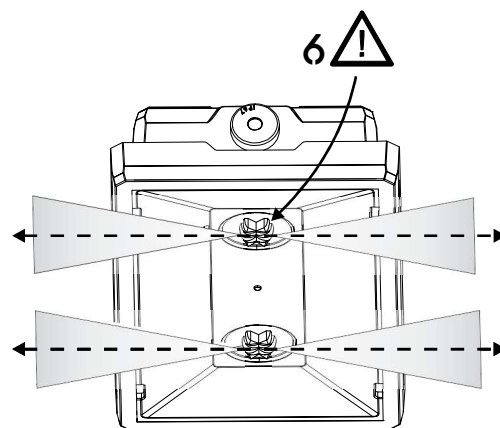 
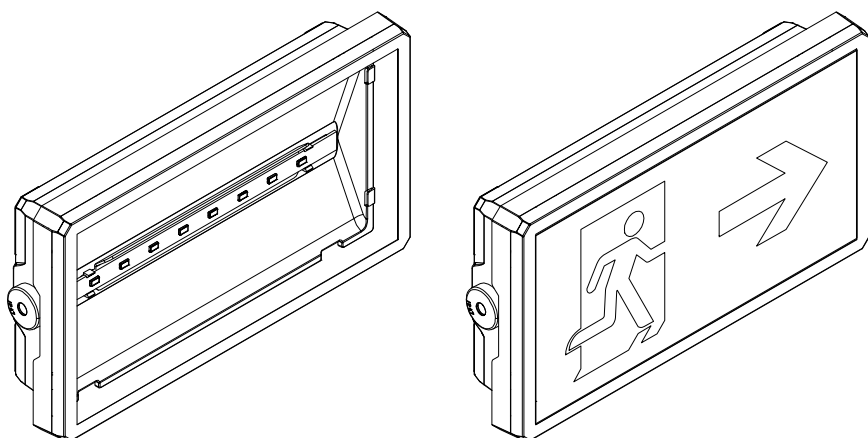 
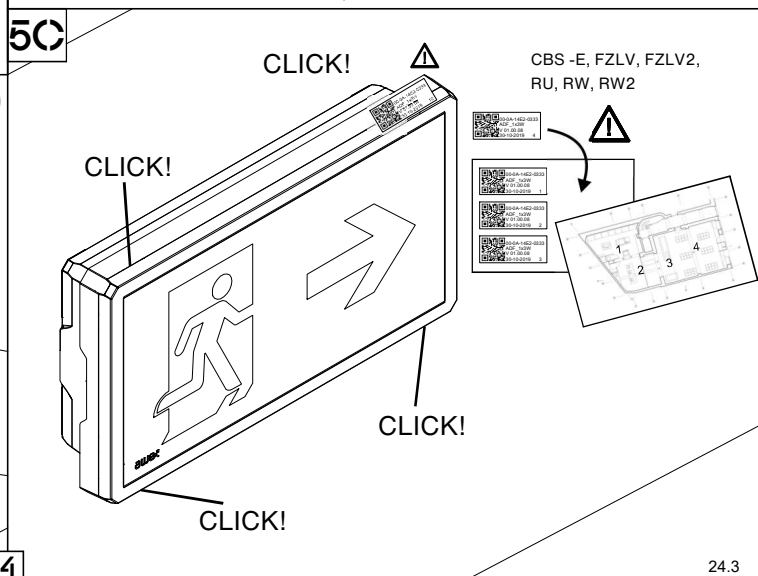 
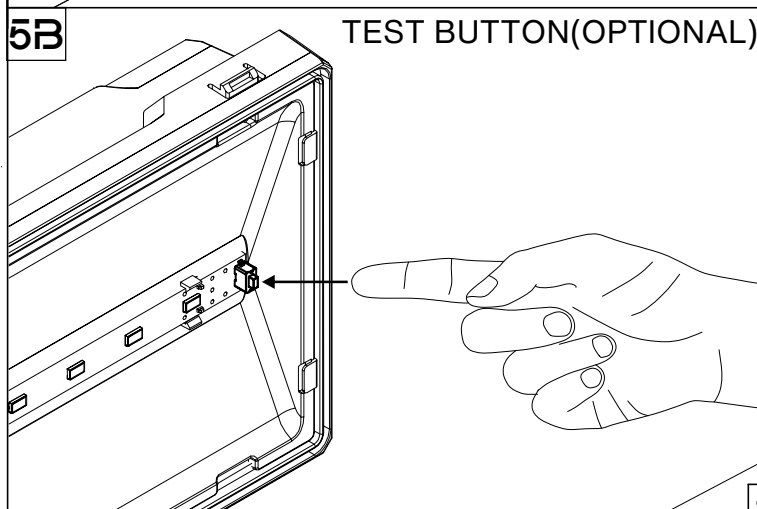 
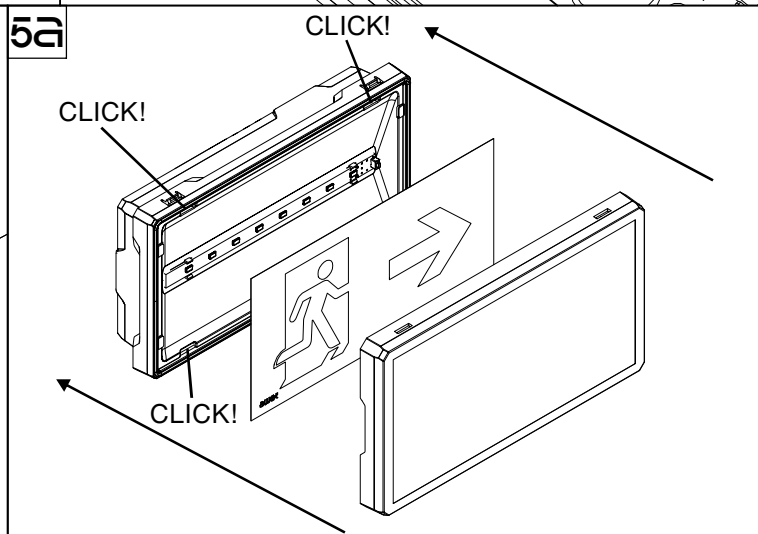 
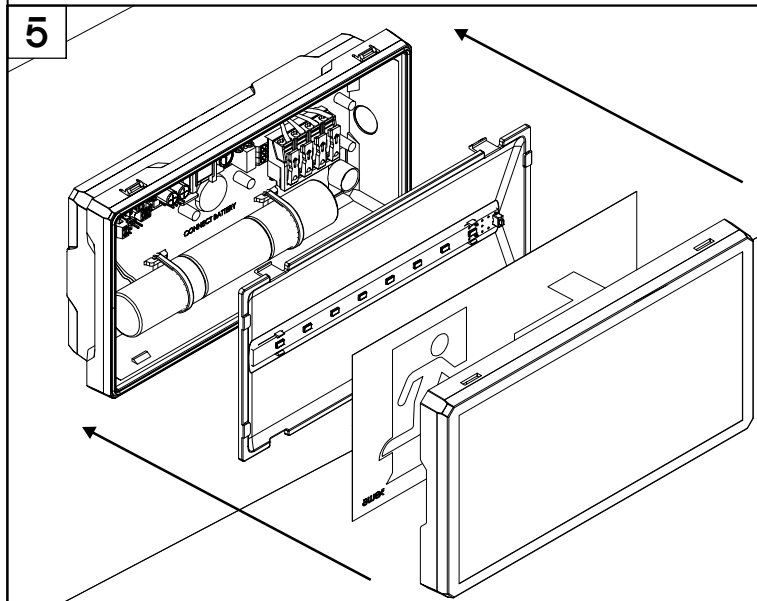 
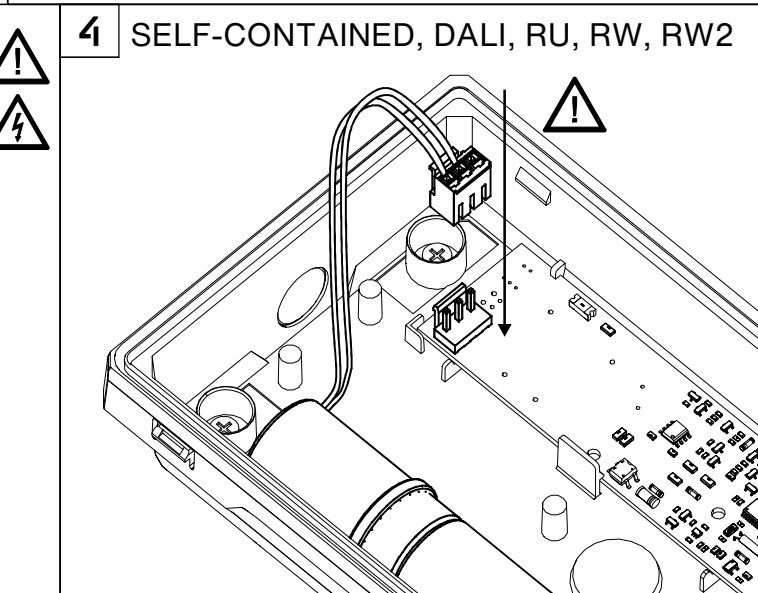 
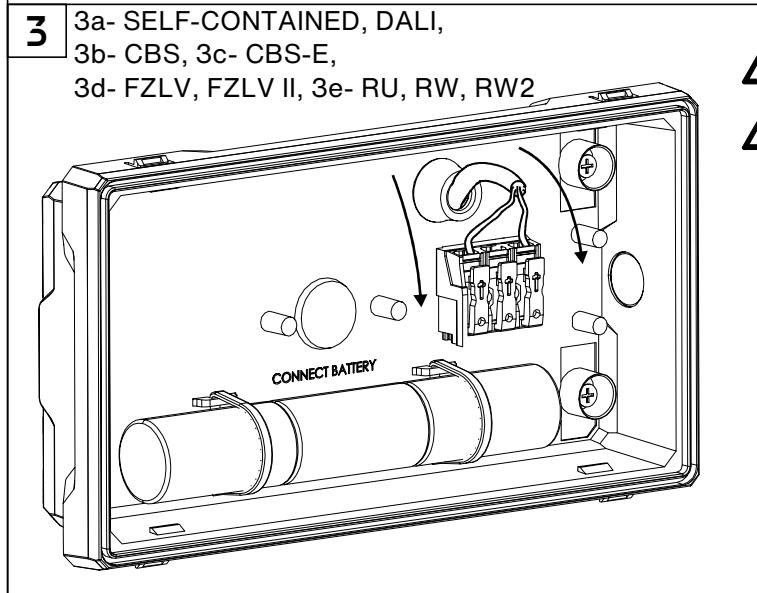 


EXIT S

 
ETS

INSTRUKCJA MONTAŻU
 ASSEMBLY INSTRUCTIONS
 INSTALLATIONSANWEISUNGEN
 INSTRUCTIONS D'INSTALLATION
 INSTRUCCIONES DE INSTALACIÓN
 ISTRUZIONI PER L'INSTALLAZIONE

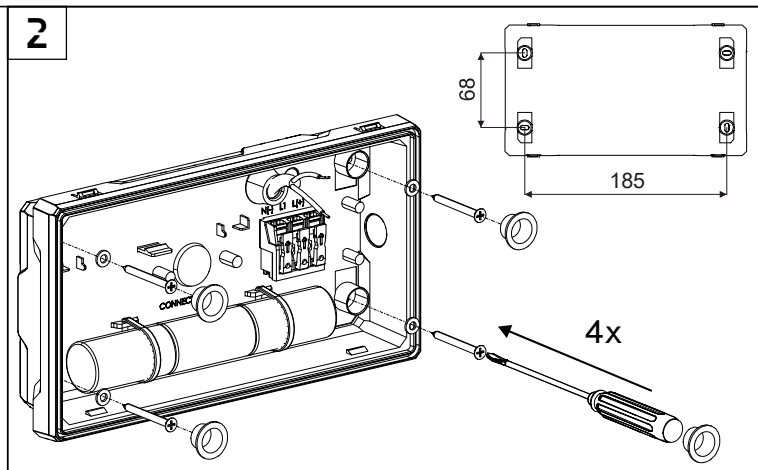


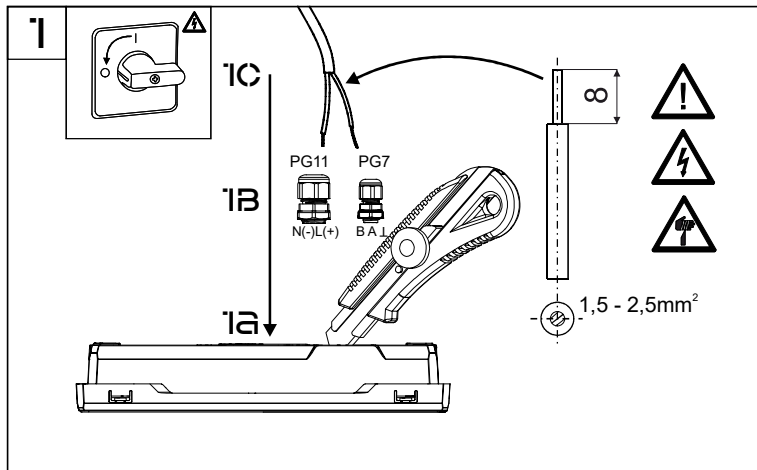


6A ETS

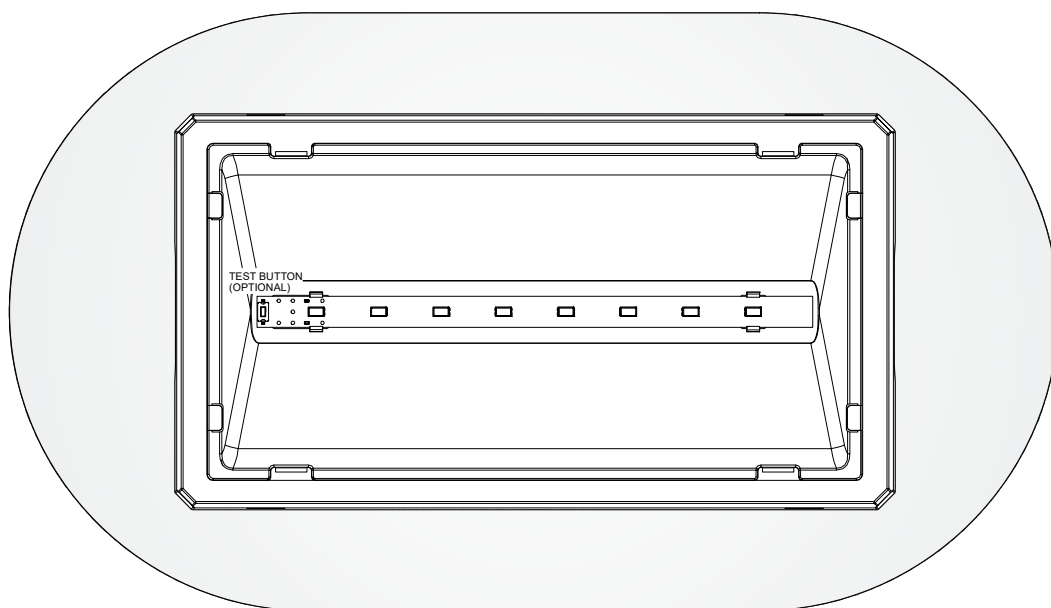

6B ETSU

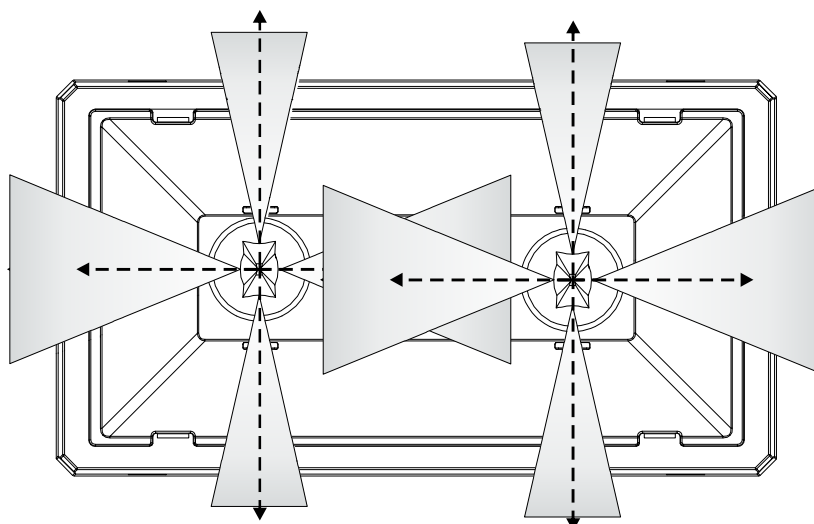 


6C ETSR

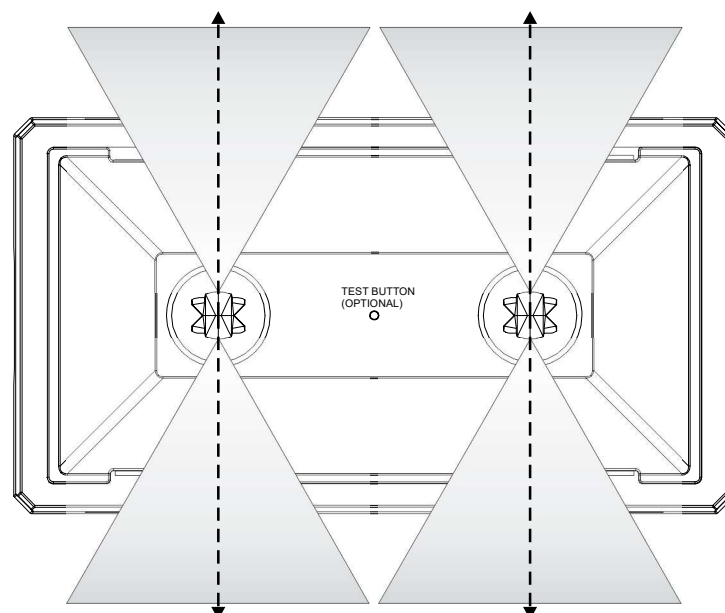 


3A SELF-CONTAINED, DALI



 
220÷240VAC, 50/60Hz

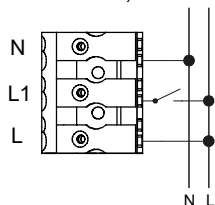


220÷240VAC, 50/60Hz

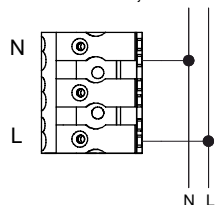 

DALI

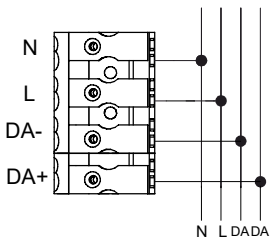 



CONNECT THE BATTERY

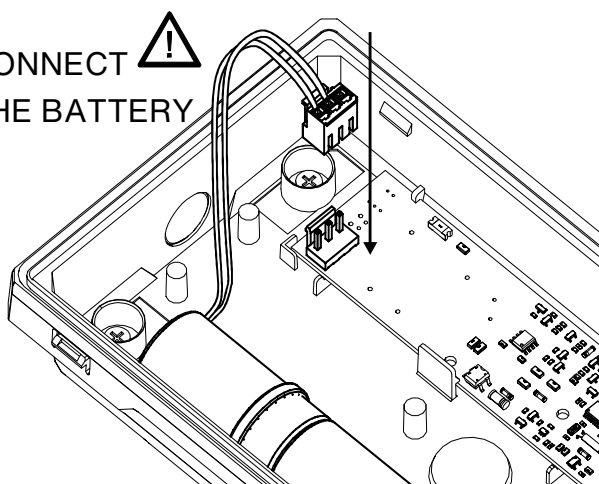 


3B CBS



  220÷240VAC, 50/60Hz
176÷275VDC

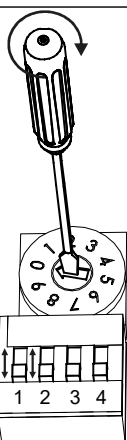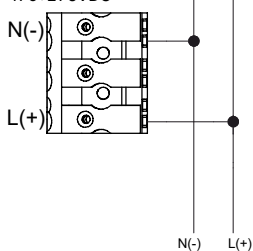



Example,
address number 12

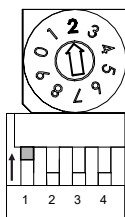 

3C CBS- E



  
220÷240VAC, 50/60Hz
176÷275VDC

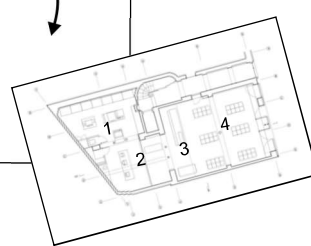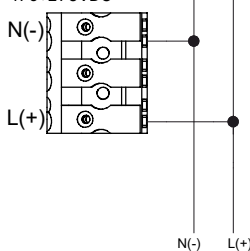



3D FZLV, FZLV II



 FZLV
24VDC

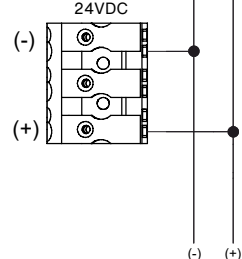


FZLV
48VDC

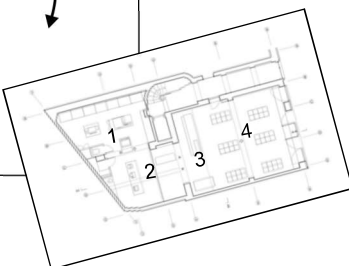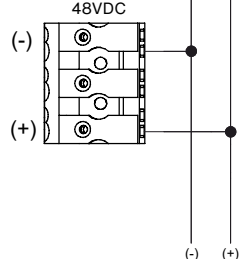  


3E RU, RW, RW2



 
RU, RW, RW2:
220÷240VAC, 50/60Hz

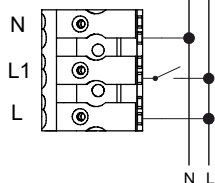

RU, RW, RW2:
220÷240VAC, 50/60Hz

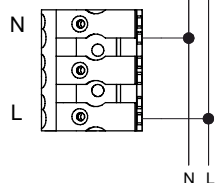 

RU:
BUS

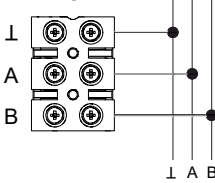 

CONNECT THE BATTERY

