


BPZ-SF-17/-20(-W)

170900091

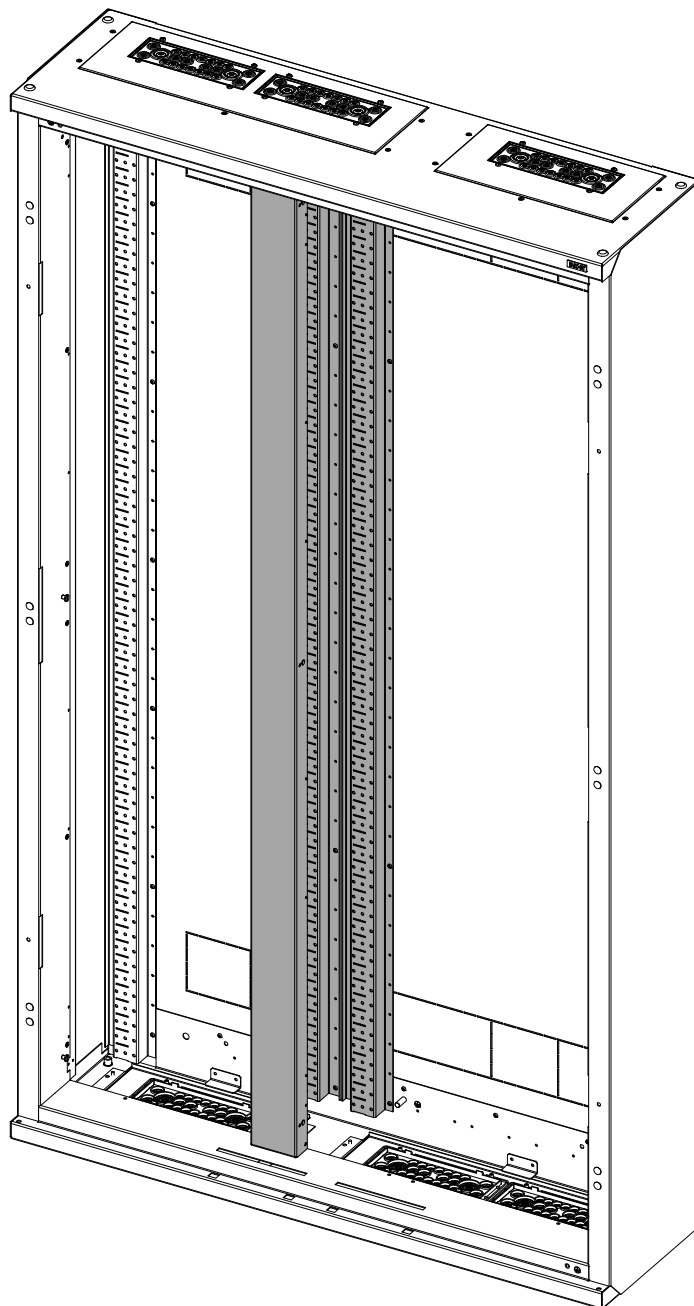

(en) Electric current! Danger to life!
Installation, commissioning and maintenance work must be carried out by qualified personnel only.

(de) Lebensgefahr durch elektrischen Strom!
Arbeiten bzw. Montage an diesem Produkt darf nur von Elektrofachkräften und elektrotechnisch unterwiesenen Personen ausgeführt werden.

description	art. no.
RAL 7035	
BPZ-SF-17	108374
BPZ-SF-20	108375
RAL 9016	
BPZ-SF-17-W	108376
BPZ-SF-20-W	108377

1		2x
2		1x
3		2x
4		M5x12 12x
5		4,2x9,5 8x
6		3x8 24x


7	173633 - BPZ-SFB-800 (only needed for the section W800)	1x
---	--	----



BPZ-SF-17/-20(-W)



BP-F (Floor – standing cabinet IP30) – W800

step-1

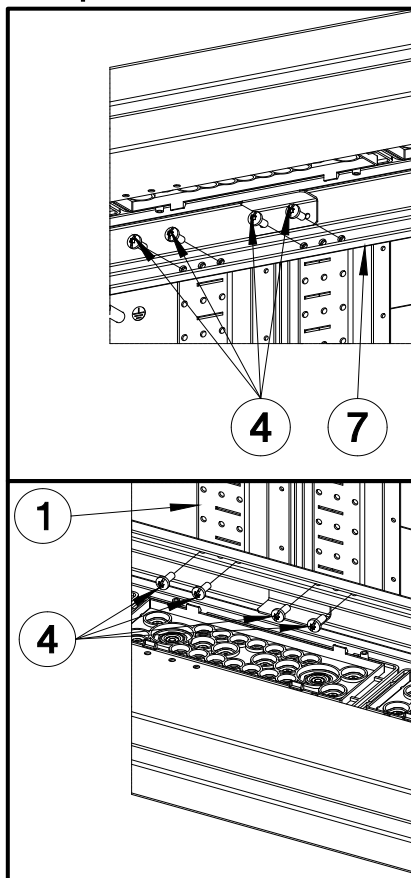

for the section – width 800,
we need 8pcs. of the pos. 4 to mount the
pillars on the BPZ-SFB-800


Example with 2K-flange

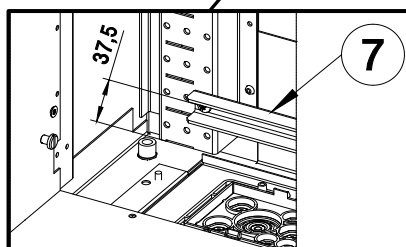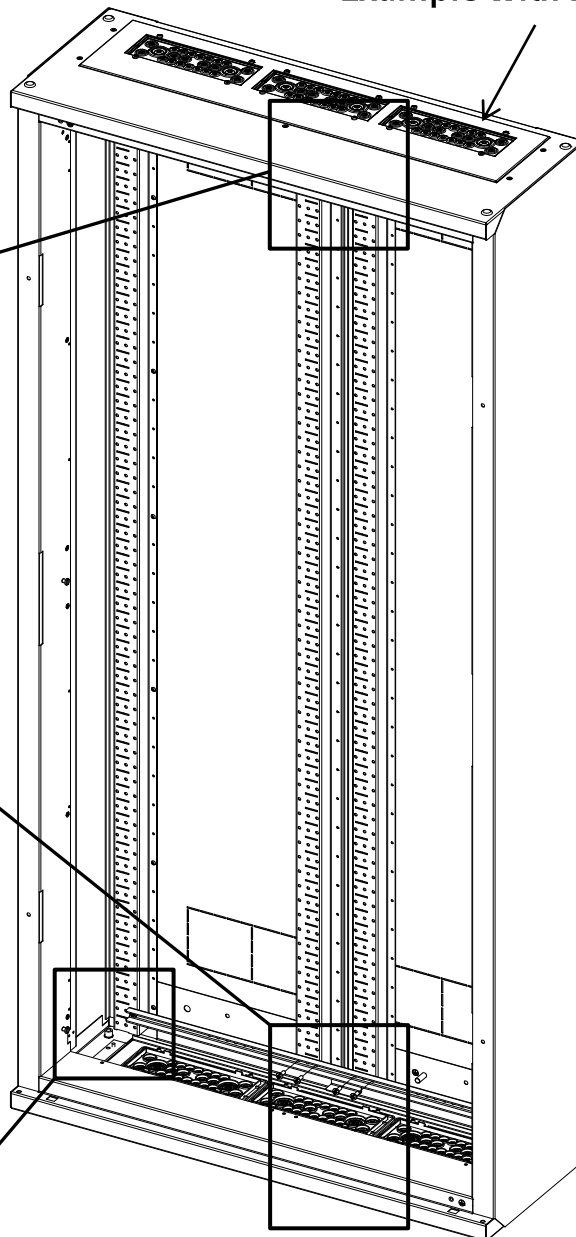


BP-F (Floor – standing cabinet IP30) – W1000 / W1200

Example with 2K-flange

step-1

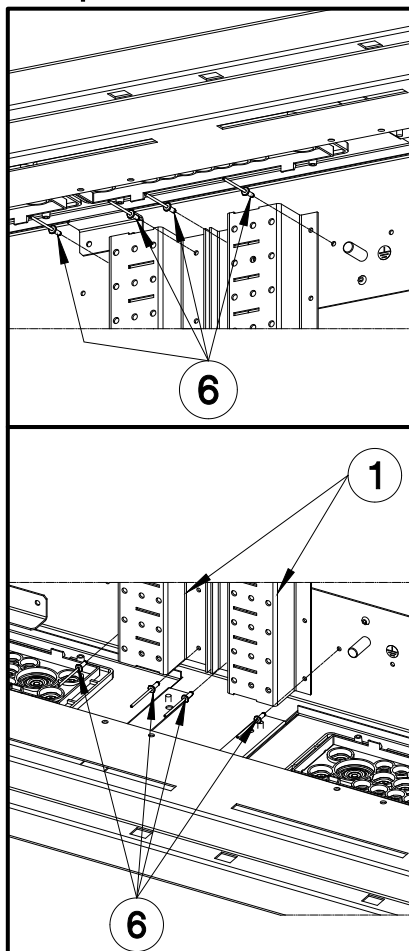


step-2

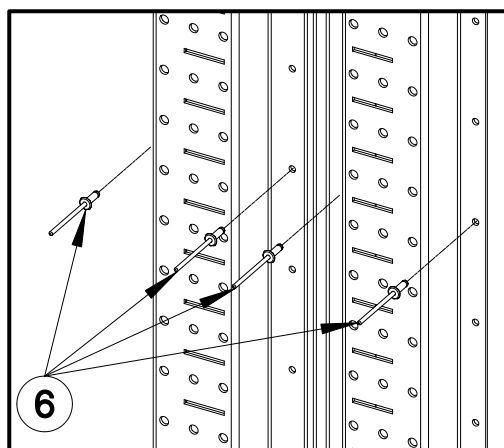


8x $\varnothing 3,2\text{mm}$

BP-F (Floor – standing cabinet IP30)

step-3

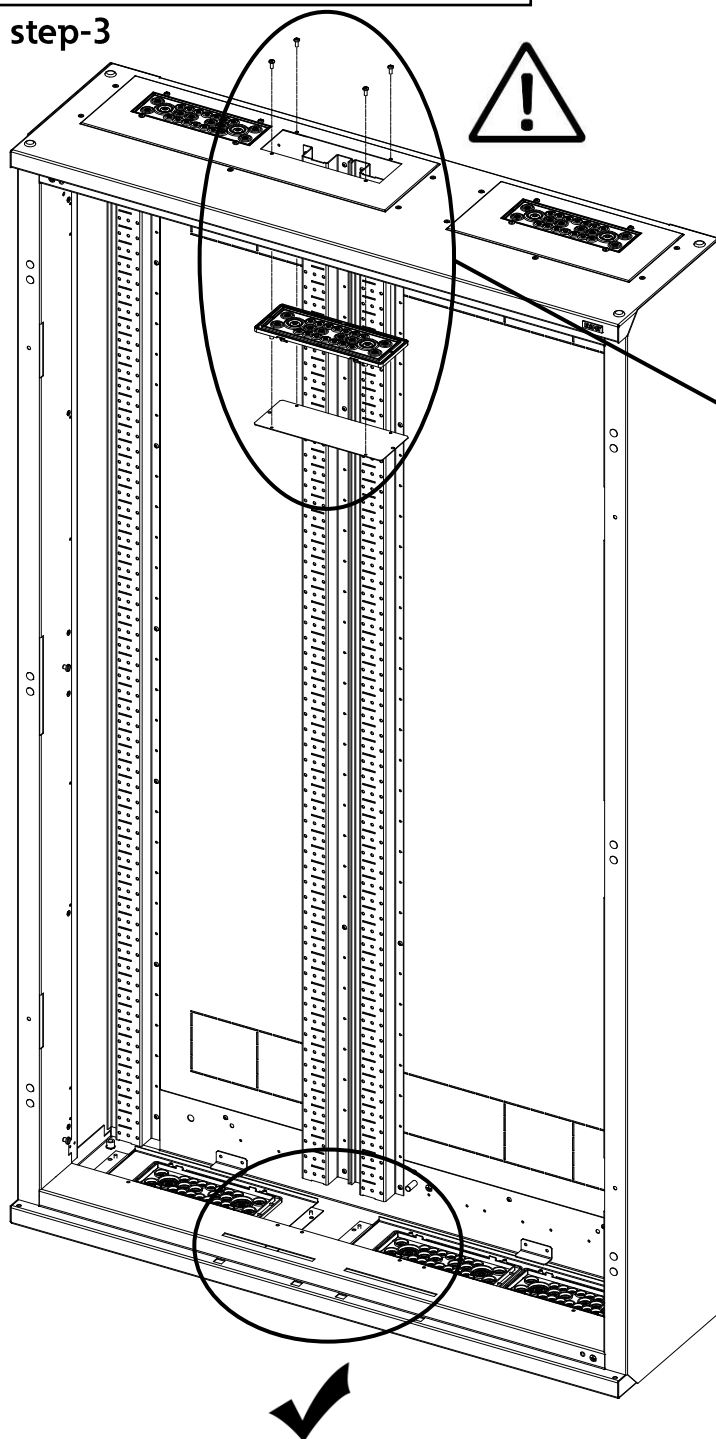

for example section W1000

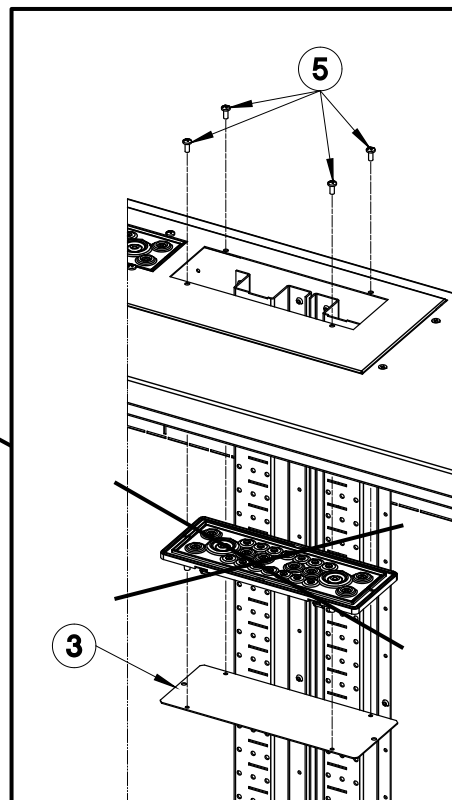
**note:**

if you have a collision between the mounting pillar and the 2K-flange,
so use the blind – plate (pos.3)

(when using BP-FLP-BL/ -F3A/ -VS, the blind plate (pos.3) is not needed)

BPM-F (Floor – standing cabinet IP55) – W800

step-1

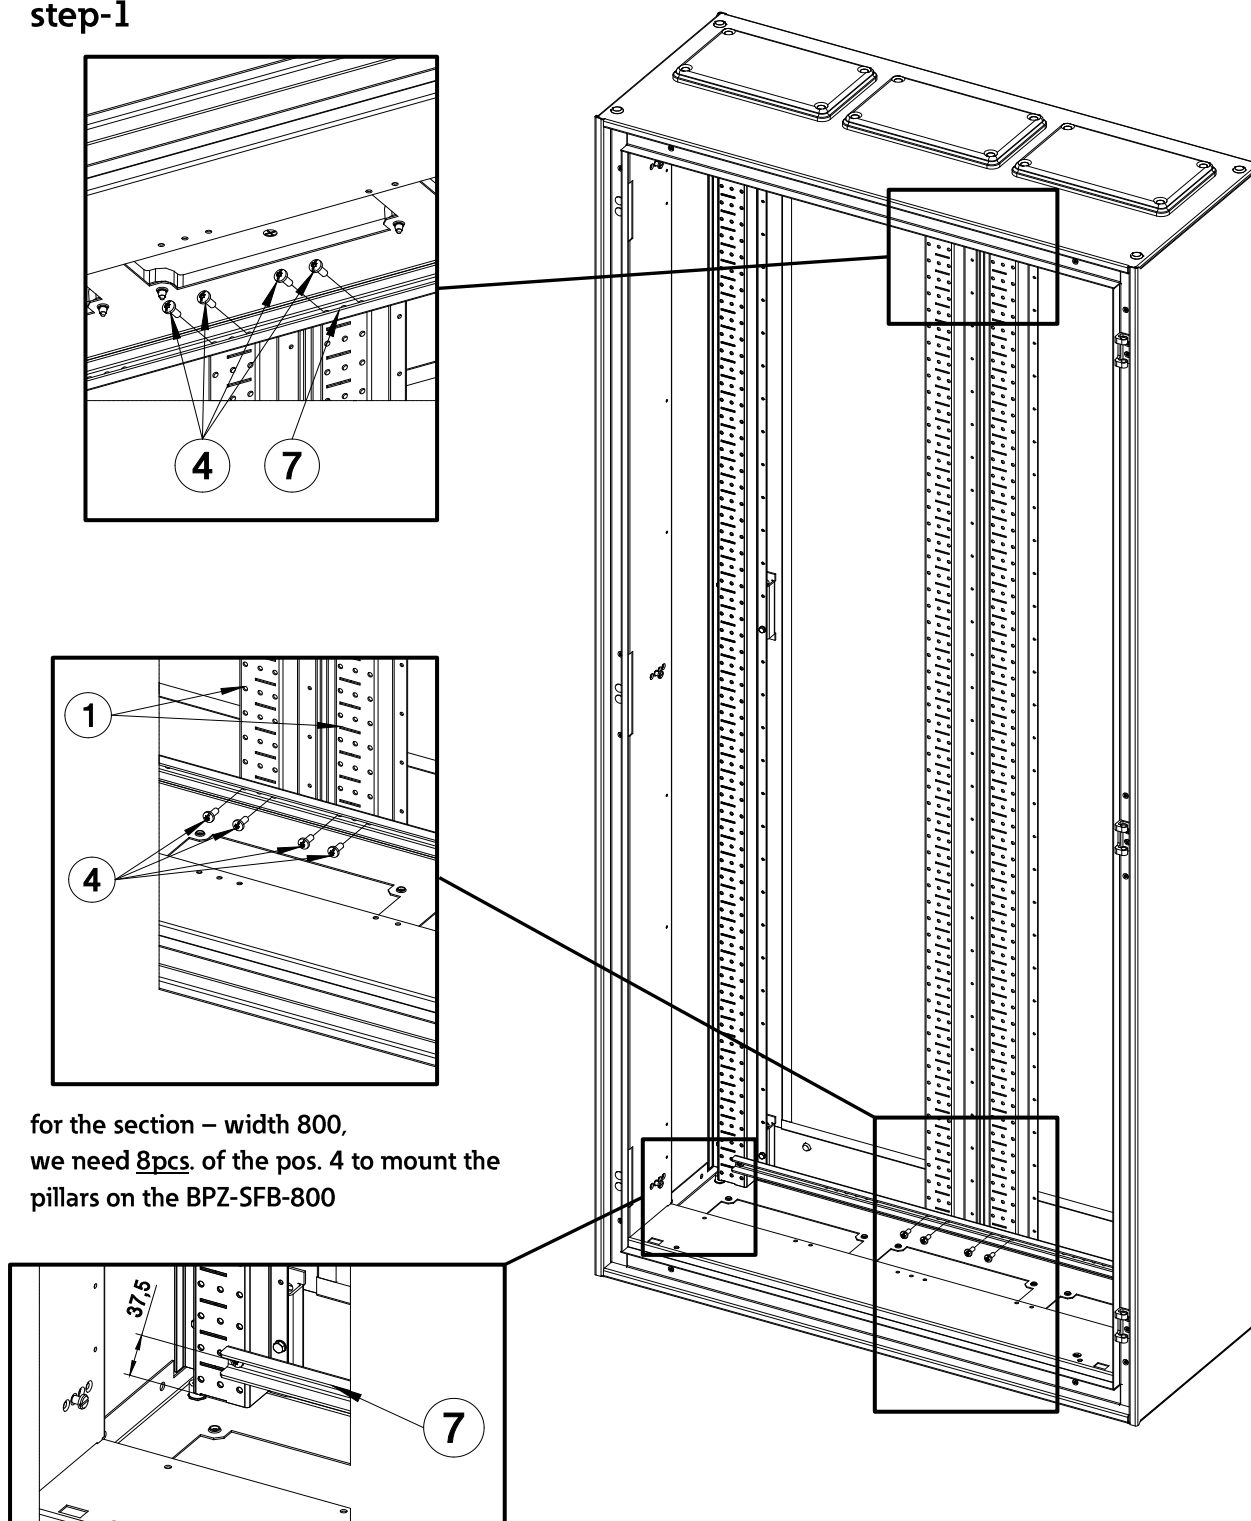


note:

the blind plate (pos.3) is not needed for application BPM-F

BPZ-SF-17/-20(-W)

BPM-F (Floor – standing cabinet IP55) – W1000 / W1200

step-1

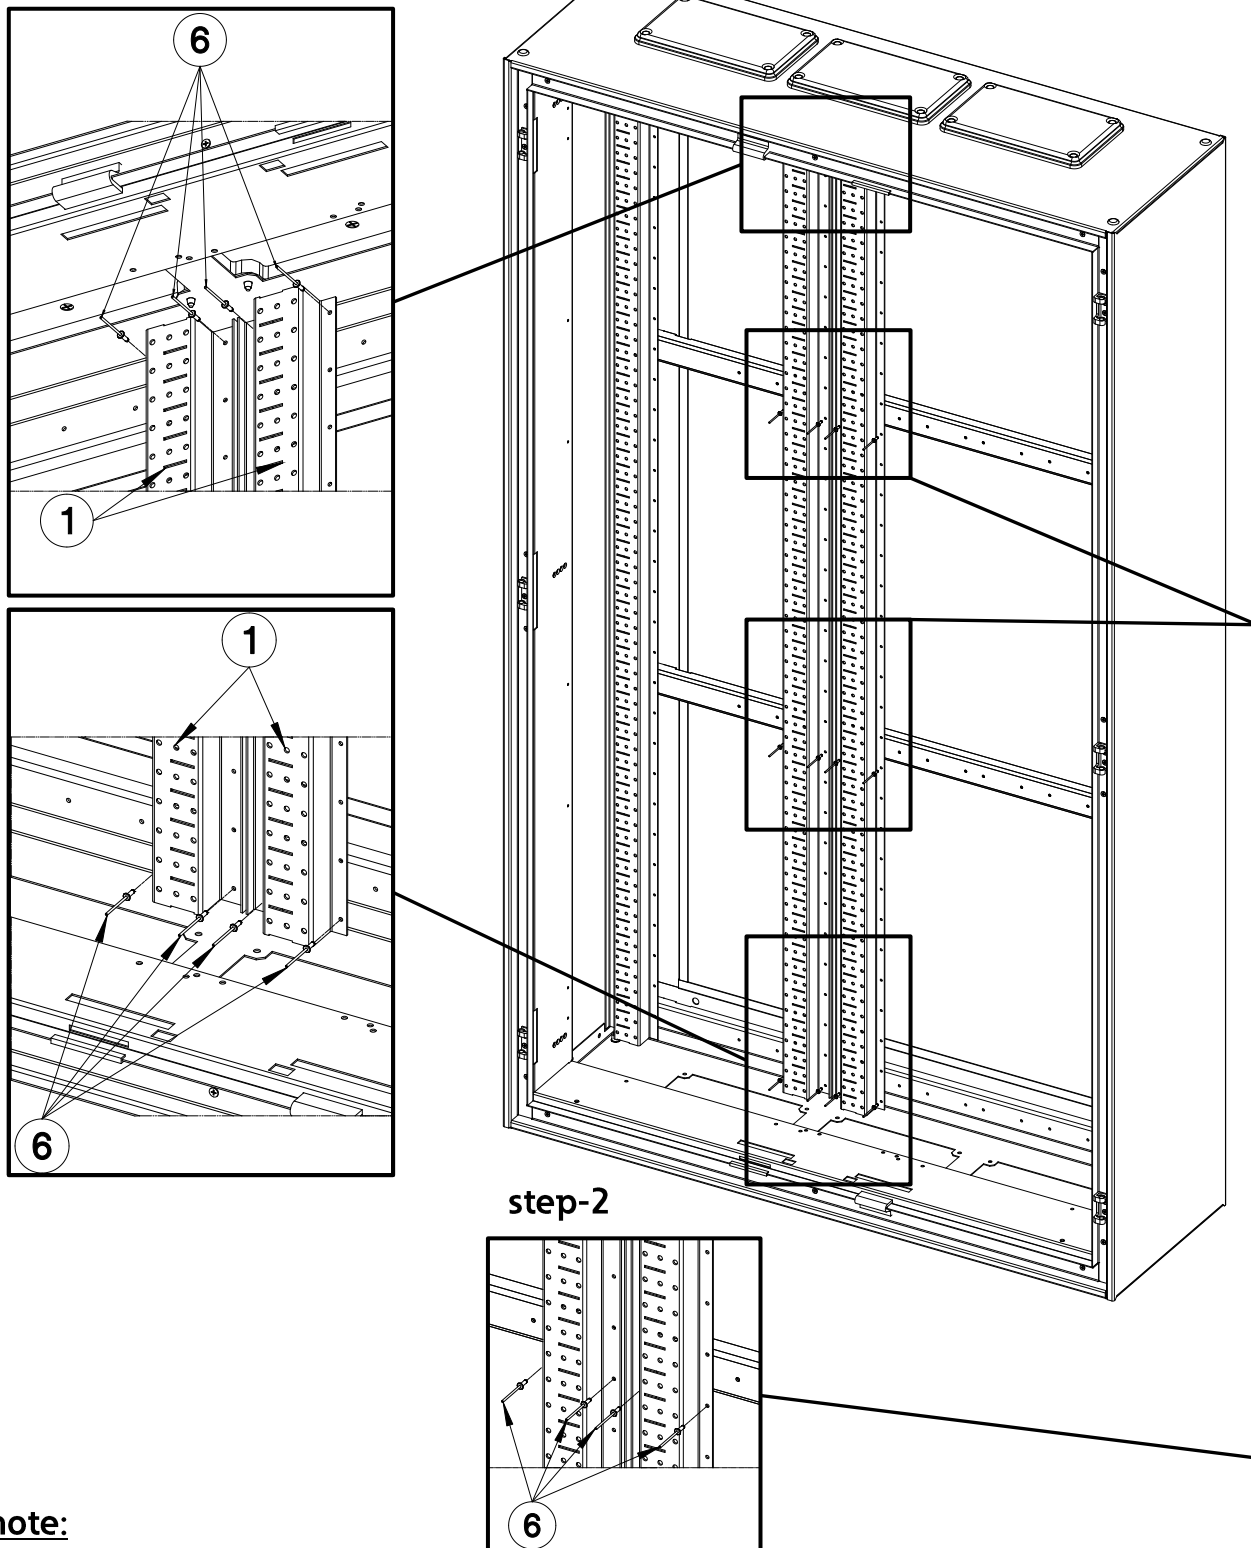

step-2

note:

the blind plate (pos.3) is not needed for application BPM-F


BPZ-SF-17/-20(-W)

170900091

BP-F (Floor – standing cabinet IP30)

BPM-F (Floor – standing cabinet IP55)

step-4

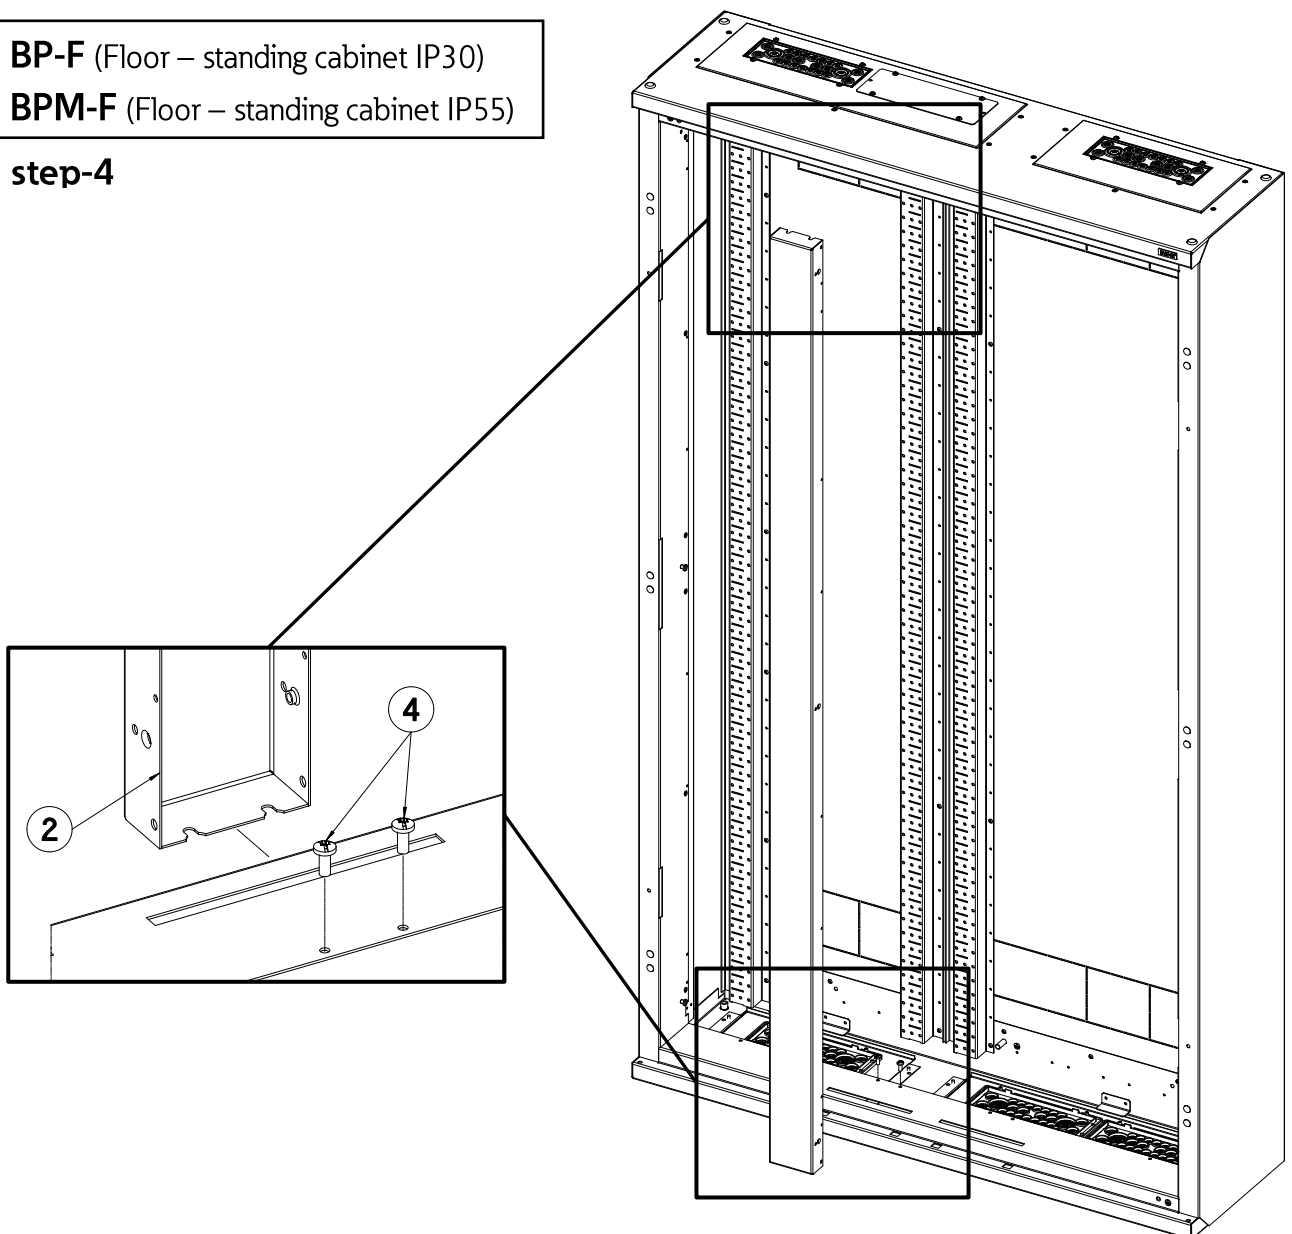

section width	Partition [mm]	
W800	400	400
W1000	600	400
W1000	400	600
W1200	600	600
W1200	800	400
W1200	400	800
W1200	400	400